


REWIRING ECU CONNECTOR FOR PROGRAMMING:

- 1) REMOVE THE LARGE ECU CONNECTOR FROM THE ECU AND PRESS IN THE SINGLE WHITE TAB ON THE BOTTOM OF THE CONN. THIS UNLOCKS THE PINS.
- 2) PULL OUT THE WIRES LISTED BELOW AND REINSERT THEM AS INDICATED.
- 3) MAKE SURE ALL THE WIRES IN ALL THE WAY THEN PUSH DOWN THE TWO WHITE TABS AT THE TOP OF THE CONNECTOR TO RELOCK THE PINS.

WIRE	REMOVE FROM:	INSERT INTO:
BLUE/YEL	16	14
BLUE/RED	15	29
BLUE/GRN	25	30
BLUE/BLK	24	32
BLUE/WHT	23	34

Terminal Numbers of ECU Connectors

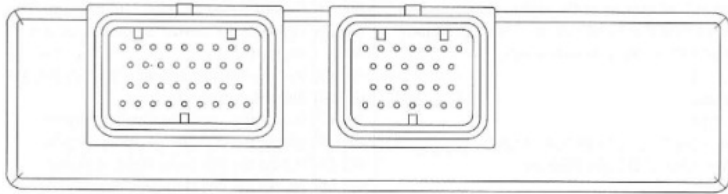

1	2	3	4	5	6	7	8	9	35	36	37	38	39	40	41
10	11	12	13	14	15	16	17		42	43	44	45	46	47	
18	19	20	21	22	23	24	25		48	49	50	51	52	53	
26	27	28	29	30	31	32	33	34	54	55	56	57	58	59	60

PIN NUMBERS FROM WIRE SIDE OF PLUG

	14 MD1	
BLUE / RED	15 COS1	
BLUE / YELLOW	16 COS2	
BLUE / WHITE	23 COV1	
BLUE / BLACK	24 COV2	
BLUE / GREEN	25 COV3	
	29 TXD	
	30 RXD	
	32 FWE	
	34 RES	
RED	48 5VDC	
BLACK / BROWN	54 GND	

STOCK WIRING

BLUE / YELLOW	14 MD1	
	15 COS1	
	16 COS2	
	23 COV1	
	24 COV2	
	25 COV3	
BLUE / RED	29 TXD	
BLUE / GREEN	30 RXD	
BLUE / BLACK	32 FWE	
BLUE / WHITE	34 RES	
RED	48 5VDC	
BLACK / BROWN	54 GND	

REWired FOR PROGRAMMING

www.bikeland.info

Title		
BUSa REWIRE FOR PROGRAMMING		
Size B	Document Number BUSA0004	Rev A-1
Date:	Thursday, March 27, 2008	Sheet 1 of 1