

REWIRING ECU CONNECTOR FOR PROGRAMMING:

- 1) REMOVE THE LARGE ECU CONNECTOR FROM THE ECU AND PRESS IN THE SINGLE WHITE TAB ON THE BOTTOM OF THE CONN. THIS UNLOCKS THE PINS.
- 2) PULL OUT THE WIRES LISTED BELOW AND REINSERT THEM AS INDICATED.
- 3) MAKE SURE ALL THE WIRES IN ALL THE WAY THEN PUSH DOWN THE TWO WHITE TABS AT THE TOP OF THE CONNECTOR TO RELOCK THE PINS.

WIRE	REMOVE FROM:	INSERT INTO:
BLUE/YEL	16	14
BLUE/RED	15	29
BLUE/GRN	25	30
BLUE/BLK	24	32
BLUE/WHT	23	34

NOTE:


TO PROGRAM THE ECU OUT OF THE BIKE USE THE TWO CABLES TOGETHER TO CONNECT THE PROGRAMMER TO THE ECU.

TO PROGRAM THE ECU IN THE BIKE PLUG THE PRGMR TO IDK CABLE INTO THE BIKE'S IDK WIRE HARNESS CONNECTOR OR SPLICE THE PRGMR PIGTAIL CABLE INTO THE WIRE HARNESS

FOR THE IN BIKE PROGRAMMING TO WORK THE ECU CONNECTOR MUST FIRST BE REWIRED. THE ECU CONN PINS CAN EASILY BE REMOVED AND REINSERTED IN DIFFERENT PIN POSITIONS.



1	2	3	4	5	6	7	8	9
10	11	12	13	14	15	16	17	
18	19	20	21	22	23	24	25	
26	27	28	29	30	31	32	33	34

PIN NUMBERS FROM WIRE SIDE OF PLUG

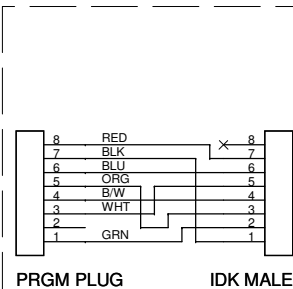

PRGM TO IDK ('YOSHBOX') CABLE

PRGM PIGTALE CABLE SPLICED INTO HARNESS

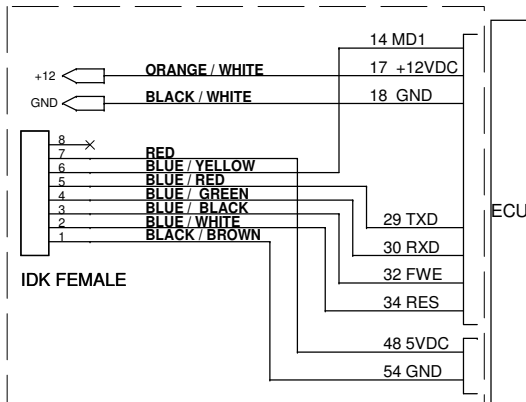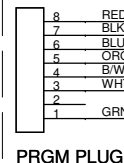

IDK ('YOSHBOX') to ECU CABLE

ECU PIN # FOR 2002-2007 SUZUKI HAYABUSA

BIKE WIRE HARNESS

ECU PIN # FOR 2002-2007 SUZUKI HAYABUSA

www.bikeland.info

Title		
ECU PROGRAM BOX AND CABLES		
Size	Document Number	Rev
B	ECU-001-0089	A-1
Date:	Saturday, March 22, 2008	Sheet 1 of 1